

Steps for updating the software:

1. Take out your micro SD card(max 32G).
2. Download the file, drag the unzipped **Firmware.bin** and **Picture.bin** , and copy them into the root directory of a micro SD card (if the file names are not Firmware.bin and Picture.bin, please rename the files).
3. Insert the card into the console, power off the console, power on the console, and update the program.