

# Firmware Upgrade

The firmware can be upgraded in three ways: USB, SD card and OTA, so you can choose the appropriate upgrade way according to your device model.

	USB	SD card	OTA				
			Host	ecowitt app		WSView Plus app	Web UI
				Edit Gateway	Others		
WS6006	○	×	×	×	×	×	×
HP2550 HP2560	×	○	○	×	×	×	×
HP3500	×	○	×	×	×	×	×
WS85	○	×	To be developed.	×	×	×	×
WS90 WS80	○	×	×	×	×	×	×
EasyWeather WiFi xxxx	×	×	×	×	×	○	×
EasyWeather Pro WiFi xxxx	×	×	×	○	○	○	○
GW1000	×	×	×	×	×	○	×
GW1100, GW1200, GW2000, GW3000	×	×	×	○	○	○	○
WN1800, WN1820, WN1980, WS3800, WS3900	×	×	×	○	○	○	○

- \*note: 1. “○” means the firmware can upgrade by this way.  
 2. “×” means the firmware can not upgrade by this way.  
 3. If your device is upgraded via USB, you need to prepare a USB; if your device is upgraded via SD card, you need to prepare a SD card with RAM no less than 32G.  
 4. You can upgrade your firmware on any network by the ecowitt app-Edit Gateway-way.

## 1. The USB and SD card upgrade way

**Step 1:** Search for "ecowitt" in your browser to access the ecowitt homepage.

**Step 2:** Search for the device name.

**Step 3:** Click to go to the product detail page.

**Step 4:** Scroll down and click on "Manual download" in the bottom left corner of the page.

**Step 5:** Click "Manual & Firmware Download" to view the upgrade help file and download the upgrade package.

Buy more paid less 5 to 12% OFF

ecowitt Shop

Search

Subtotal \$0.00

IoT Camera Sensor Console Weather station kit Accessories SALE Gift card Support

step 2: Enter the device name and click on the at the rightmost

WEATHER STATION

WittBoy

Almost non-maintain 7-in-1 weather station

Learn more

NEW PRODUCT Recently updated

Search 33 results found for "WittBoy"

Availability

In Stock

Out Of Stock

33 results

Hide filter Relevance

ecowitt Extension Cord and DC12V/1A Power... From \$14.99

ecowitt WS90 7-in-1 Outdoor Anti-... \$149.99

ecowitt SHT30 Temp & Hygr with protection fil... \$19.99

ecowitt Extension Battery Pack for... \$14.99

ecowitt Bird Spikes \$9.99

ecowitt WN1981 Weather Station 5.3" LCD... \$219.99

ecowitt HP2564 Wittboy Pro 7" TFT Full-colour... \$299.99 - \$269.99

ecowitt GW2001 Wittboy Weather Station W... \$199.99

step 3

WS90 7-in-1 Outdoor Anti-ultr...

Product description

Manual download

Manual & Firmware Download

step 5

step 4

Add-Ons


GW1200 IoT Wi-Fi Gateway with Built-in Temperature/Humidity/Barometric \$31.99

Total: \$0.00

Add items to cart

Share

\$149.99 North America MHz 915 Add to cart

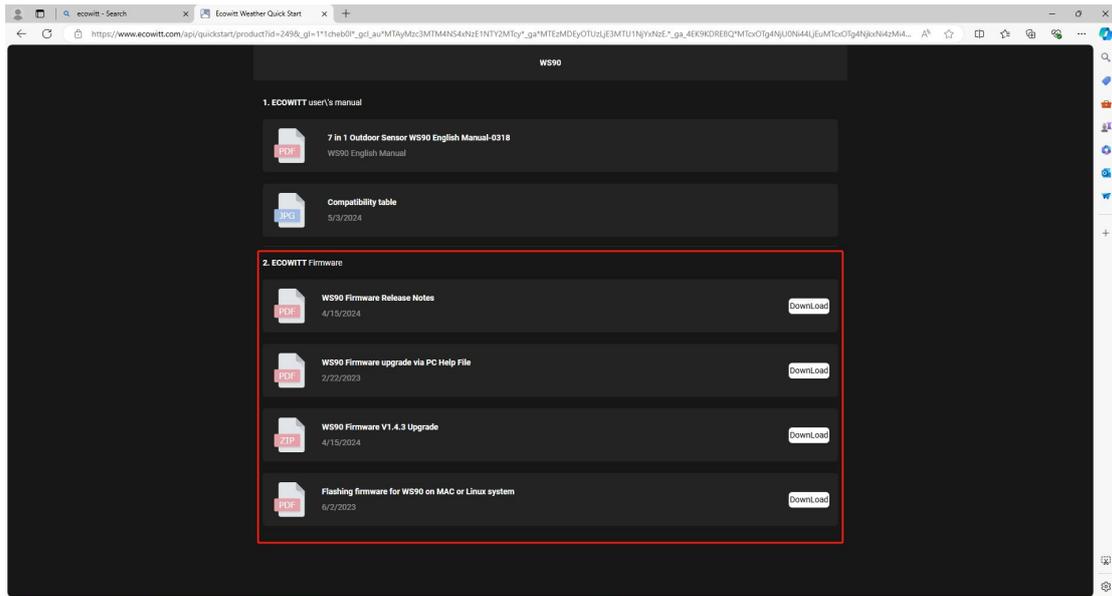

## 2. The OTA upgrade way

### 2.1 The host upgrade way


HP2550 and HP2560's host firmware upgrade steps are as follows:


**Step 1:** Click on the button below the settings until you reach the "Factory" screen.


**Step 2:** Select the "About".

**Step 3:** Select "Check firmware".

**Step 4:** Select "Download" to upgrade host firmware.

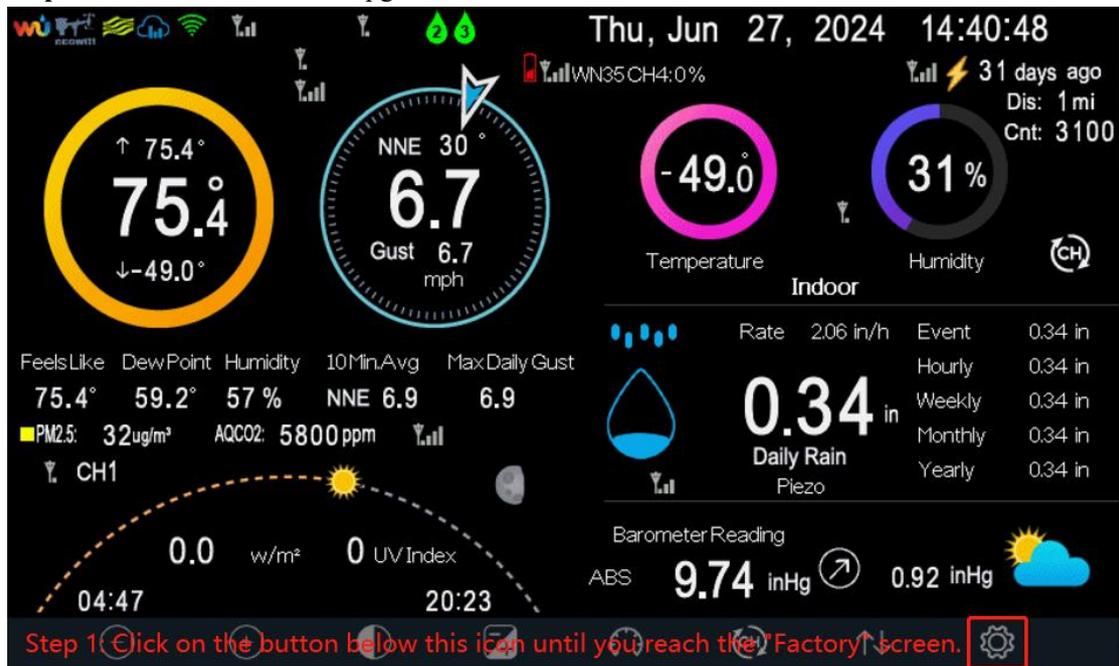

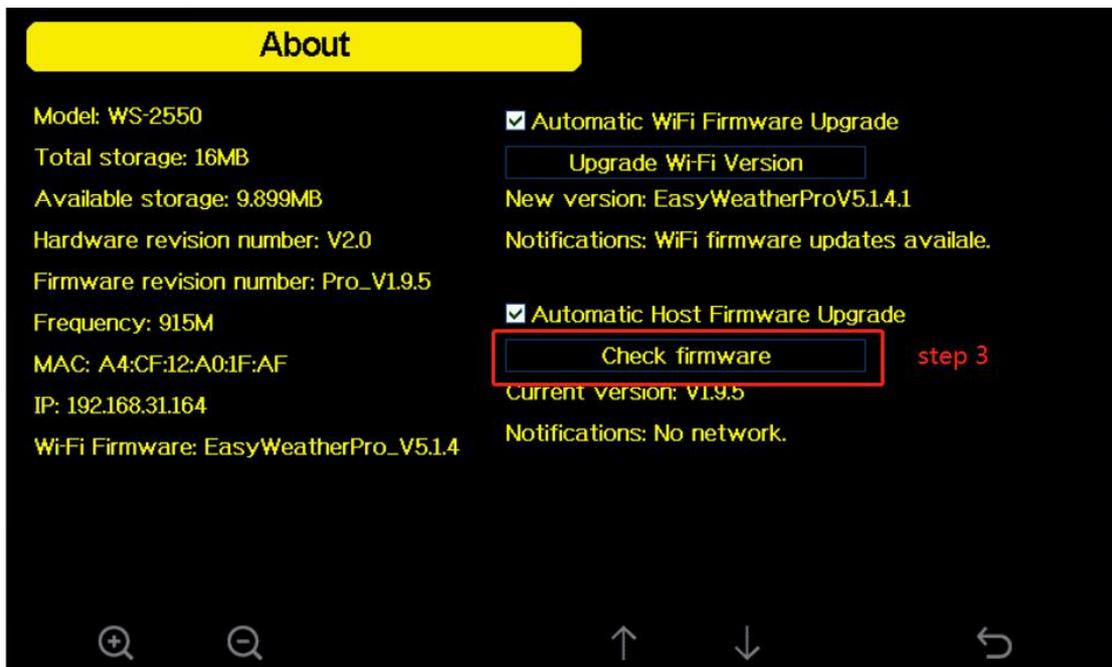

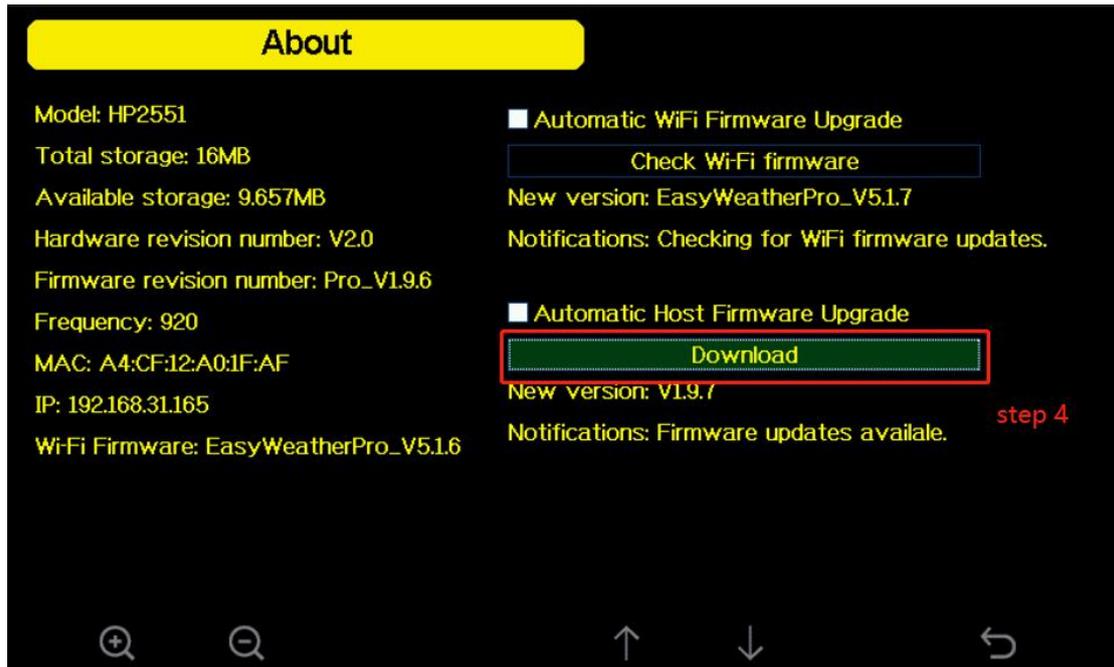

\*note: The HP2560's host firmware version should be 1.9.5 and above and their WiFi firmware EasyWeather Pro should be V5.1.4 and above.

## 2.2 The ecowitt-Edit Gateway upgrade way



**Step 1:** Click on “≡” in the top left corner of the ecowitt app.


**Step 2:** Click on “My Device”.

**Step 3:** Click on “⋮” on the right of the device that needs to have its firmware upgrade.

**Step 4:** Click the blue button to the right of “Version”.

**Step 5:** Click “Upgrade” to upgrade WiFi firmware.

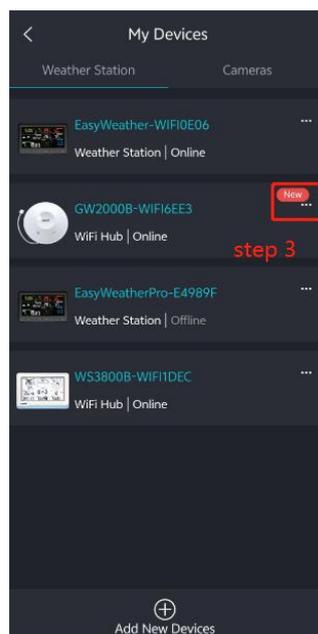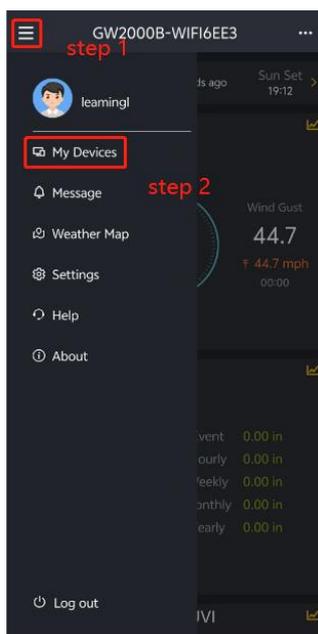

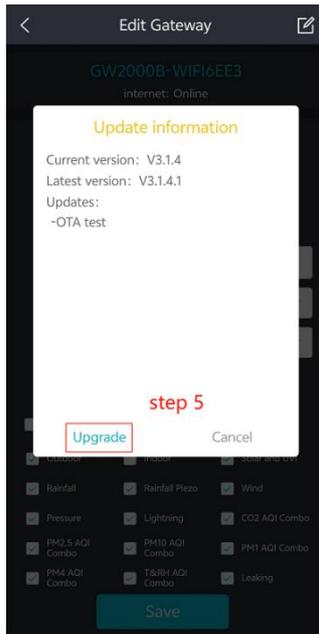

\*note: Upgrade the WiFi firmware without connecting to the WiFi which the device connected to, EasyWeather Pro needs to be upgraded to version V5.1.1 and above, GW1100 and GW2000 need to be upgraded to version V2.2.1 and above.

## 2.3 The ecowitt-Others upgrade way


**Step 1:** Confirm your phone WiFi is connected to is the WiFi that the device connected to.

**Step 2:** In the main interface of the ecowitt app, use the “<” and “>” button at the top to switch the device to which needs to upgrade the firmware.

**Step 3:** Click on “...” in the upper right corner.

**Step 4:** Click on “Others”.

**Step 5:** Click “UPGRADE” to upgrade the WiFi firmware.

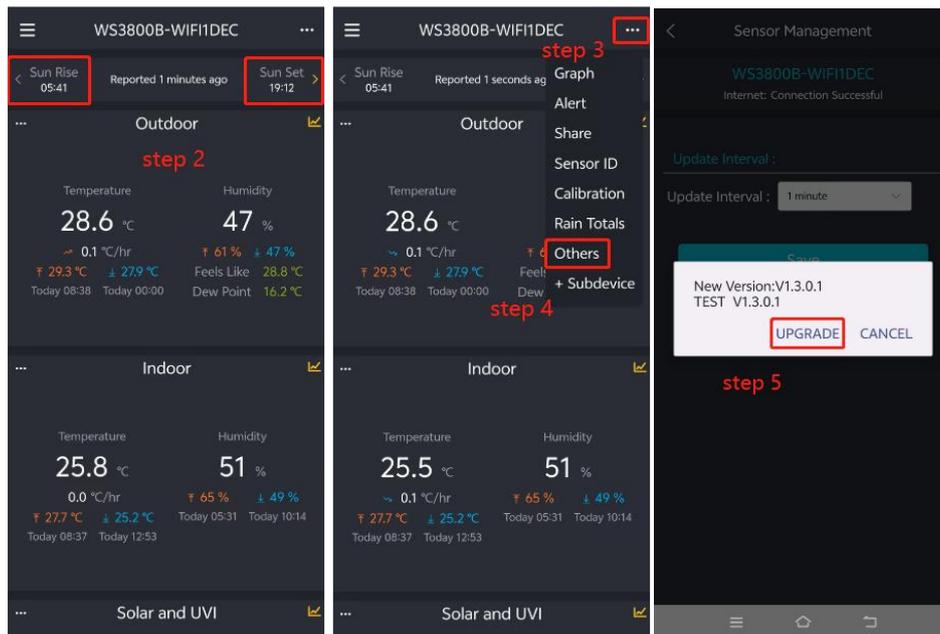


## 2.4 The WSView Plus app upgrade way

**Step 1:** Confirm your phone WiFi is connected to is the WiFi that the device connected to.

**Step 2:** On the "My Device" screen of the WSView Plus app, click on the device which you want to upgrade the WiFi firmware.

**Step 3:** Click "OK" to upgrade the WiFi firmware.

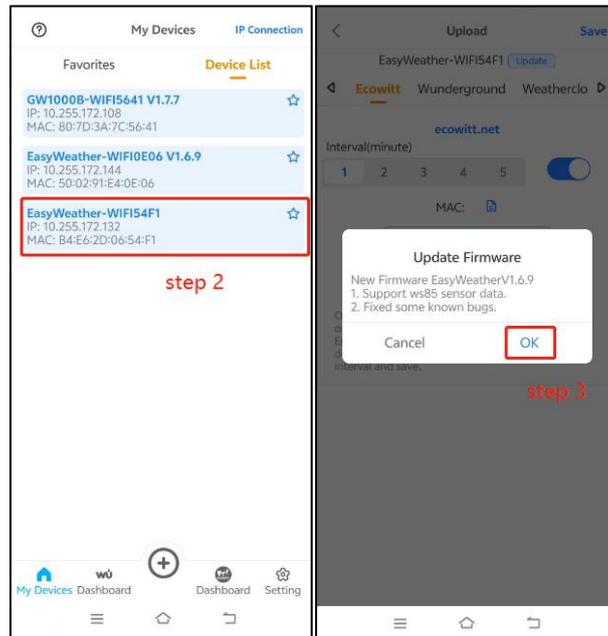

## 2.5 The Web UI upgrade way

**Step 1:** Connect your phone WiFi to the device that needs to be upgraded with WiFi firmware.

**Step 2:** Enter "192.168.4.1" in the search box of your browser to enter the webpage. After entering the webpage, please do not enter your ID and password, and log in directly.

**Step 3:** If your device is EasyWeather Pro, please see Step 3.1; if your device is not EasyWeather Pro, please see Step 3.2.



**Step 3.1:** Click "Upgrade Version" on the right side of "Version" to upgrade the WiFi firmware.



**Step 3.2:** Click "Device Setting".

**Step 4:** Click "Upgrade Version" on the right side of "Version" to upgrade the WiFi firmware.

deviceSetting

