
WN69LP/WN69SDI Firmware Upgrade Instructions

1 Required Tools

(1) USB-to-serial adapter (e.g., FT232)
(2) PC utility BAT32G_Uart_UpdateFW_Tool.exe

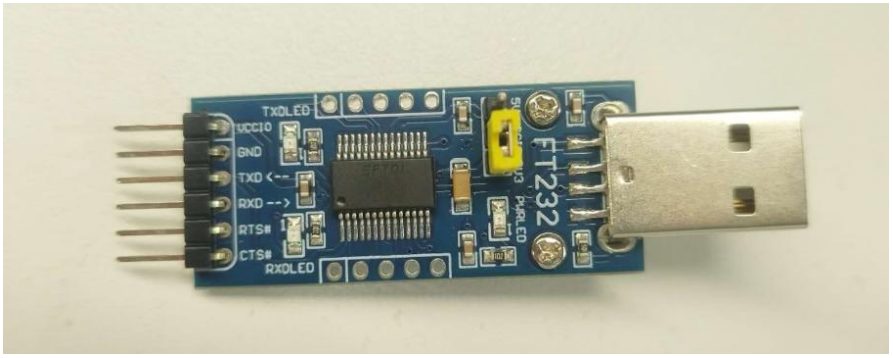


2 Upgrade Procedure


（1）Power the WN69 using an external power supply with a voltage range of 6 V to 24 V.



（2）Connect the USB-to-serial adapter's GND, TX, and RX pins to the WN69's GND, RX, and TX pins, respectively.

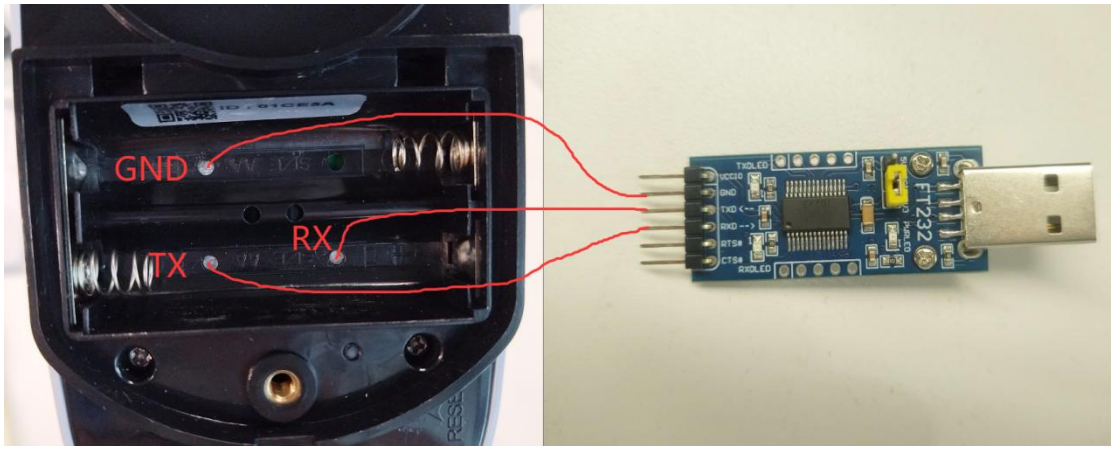


（3）Install and launch BAT32G_Uart_UpdateFW_Tool.exe. Click "选择" to load the firmware file. Select the COM port and set the baud rate to 115200.

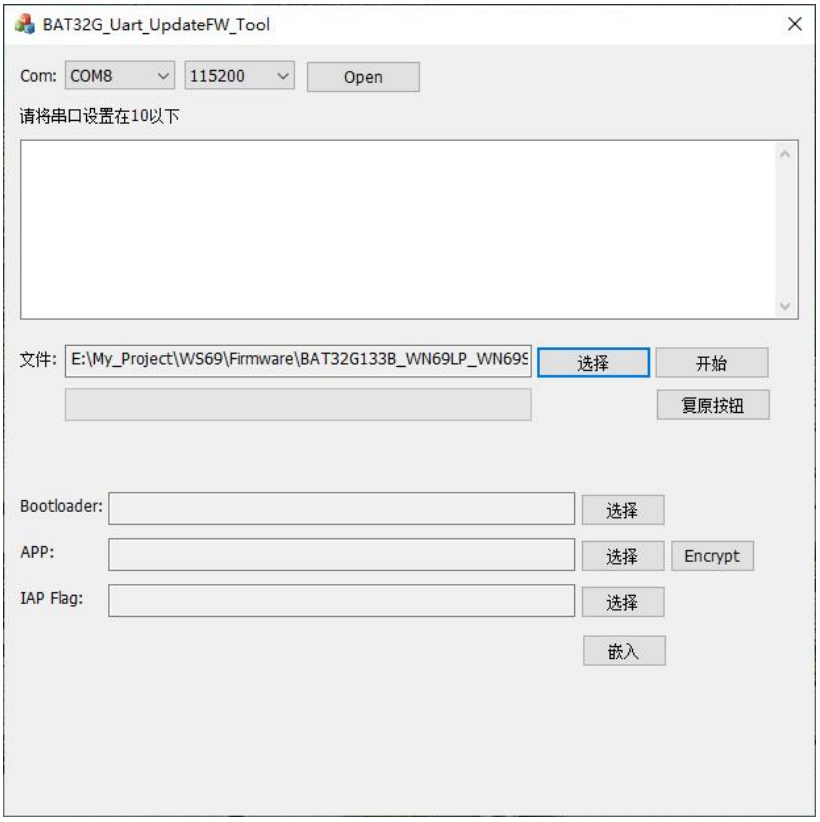


（4）Click "Open" to open the serial port, then click "开始". Press the RESET button on the WN69 once.



（5）The firmware update is in progress.

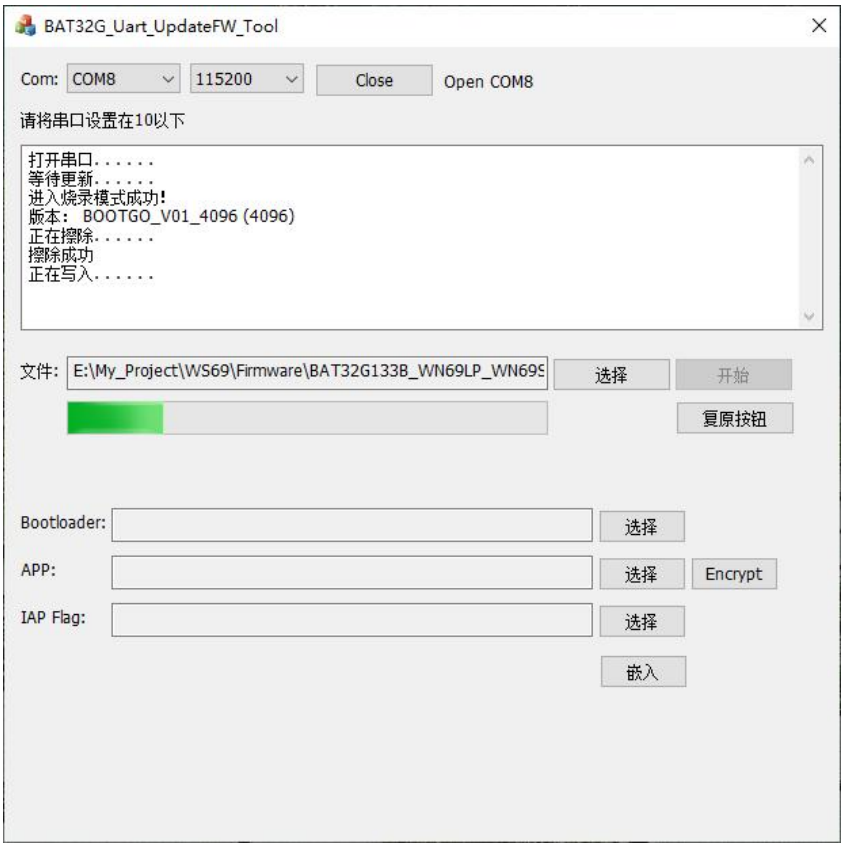

（6）The firmware update is complete.

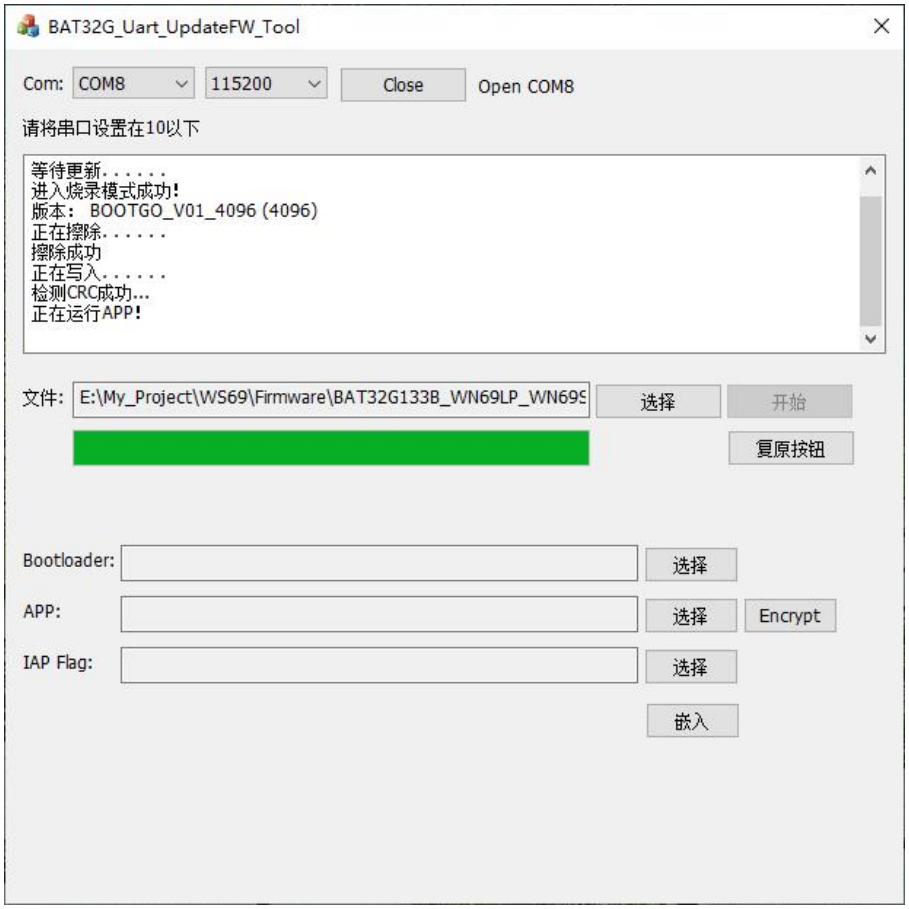

（7）Disconnect the WN69 from the USB-to-serial adapter, then press the RESET button on the WN69 once to resume normal operation.

Note: If an update failure is reported, first click "Close" to close the serial port, then click the "Reset" button and repeat Step (4).